



**Notes:**

Bridging can only be enabled on one TS-MPPT-60 on the EIA-485 network at a time (i.e. MODBUS 04).

If MODBUS 04 fails, bridging may be turned on for MODBUS 03 in order to re-establish communications with the TS-60s.