


# Coleman Air

## C440-HVM 440 Amp Diversion Controller Version 3.0



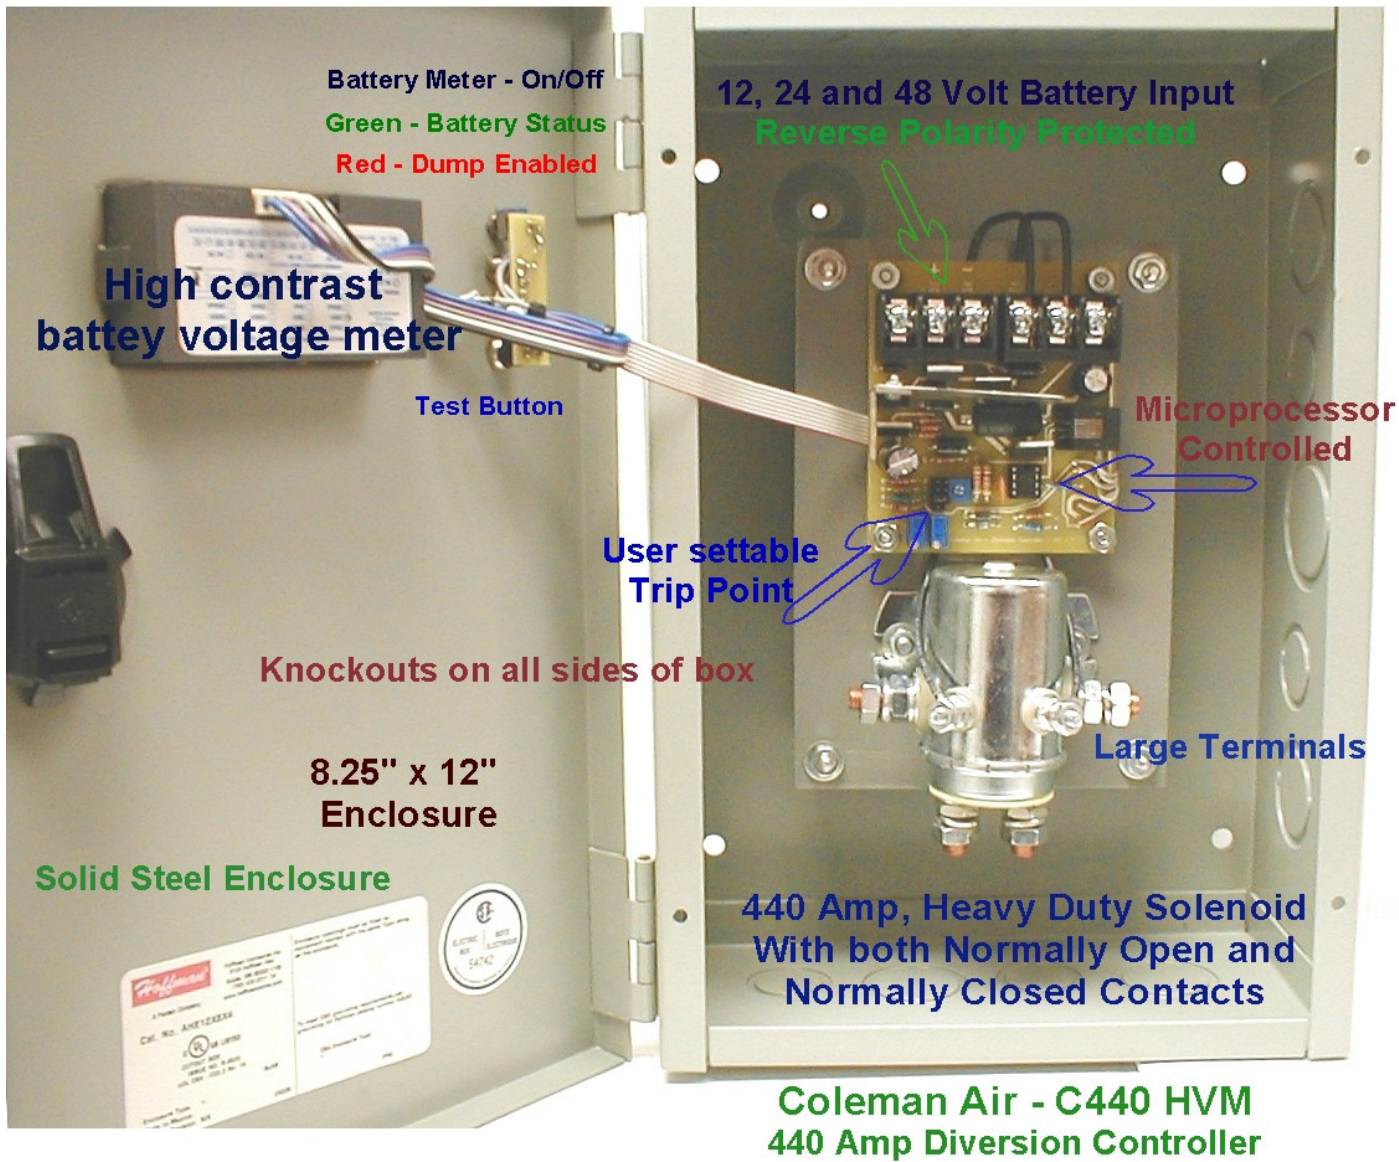

Battery Meter - On/Off

Green - Battery Status

Red - Dump Enabled

12, 24 and 48 Volt Battery Input

Reverse Polarity Protected

High contrast  
battery voltage meter

Test Button

Microprocessor  
Controlled

User settable  
Trip Point

Knockouts on all sides of box

Large Terminals

8.25" x 12"  
Enclosure

Solid Steel Enclosure

440 Amp, Heavy Duty Solenoid  
With both Normally Open and  
Normally Closed Contacts

Coleman Air - C440 HVM  
440 Amp Diversion Controller

## TABLE OF CONTENTS

Coleman Air.....	1
SOME SPECIFICS .....	5
ABOUT LOAD DIVERSION.....	6
DIVERSION LOAD TYPES.....	7
SELECTING YOUR BATTERY SYSTEM VOLTAGE .....	8
STANDARD WIRING FOR 12, 24 AND 48 VOLT BATTERY BANKS	9
USING THE CONTROLLER AS A DISCONNECT CONTROLLER	10
CALIBRATING THE DIVERSION CONTROLLER.....	11

# Introduction

This diversion controller is the result of our many attempts to use the controllers currently on the market (offered by some of the largest names in the business), to work in conjunction with our wind turbines. None of these diversion controllers did what we needed a diversion controller to do. So we designed our own -- and added all of the features that are truly needed in a diversion controller.

**Some of the key features of this controller are:**

- **Microprocessor controlled** -- This is very important for both stability and functionality.
- **User changeable settings** -- Several controllers on the market set the dump level, and that's that!
- **High amp rating** - 440 amps, 10,000 watts.
- **Multiple voltage settings** – Easy to set jumper allows use on 12, 24 or 48 volt systems.
- **High Contrast LED battery voltage meter.**
- **On/Off switch for Meter.**
- **Battery status LED** - Several controllers do not tell you what's going on - This one does!
- **Push to test.** - Ever wonder if your controller & load are working OK?
- **Reverse polarity protected** – This unit will not be damaged if you inadvertently reverse the battery sense lines.
- **Steel enclosure** - with multiple conduit openings.
- **Large terminals** - that can actually terminate large wire
- **Ability to divert the source** from the batteries to the load, or dump both the batteries along with the source. – Perfect for use with wind systems.
- **Ability to be used as a disconnect controller.** – Perfect for use with both wind and solar systems, including both at the same time.

## Some specifics

**The microprocessor is the heart of the controller.** It is given the battery voltage and the user changeable trip points. This information is analyzed and acted upon by the microprocessor. The battery level is checked and based on that information the Green LED flashes or is illuminated as follows:<sup>1</sup>

- 1 - (One) Flash indicates the battery is less than 12 volts
- 2 - (Two) Flashes indicates the battery is 12 to 12.5V
- 3 - (Three) Flashes indicates the battery is 12.6 to 13v
- 4 - (Four) Flashes indicate the battery is 13.1 to 13.5V
- 5 - (Five) Flashes indicates the battery is above 13.5V but less than 13.9V

Steady green means the battery is full.

(Settings are adjustable)

The red LED is illuminated when the battery is being dumped at 14.5v or the charge source diverted. The dump remains active for a minimum of 5 seconds, at which time it is checked by the microprocessor. If battery voltage drops below the "Dump Cancel " level, the dump is disabled, otherwise the dump is continued and rechecked every 5 seconds.

When you click the "TEST" push-button - the 5 second cycle is started (one time, unless the batteries are within the "Dump start" and "Dump Cancel" zone.)

**Settings are user changeable! By simply turning a simple potentiometer with a small screwdriver, you can quickly adjust the trip point.**

**High amp rating -- 440 Amps, 10,000 Watts -- This is a big controller.**

**About wire size -- 440 amps is a lot of current! – Insure you have selected an adequate size wire for the amperage you will be controlling. **Undersized wire can result in high heat build up in the wire and connections possibly leading to a fire.****

**Use a fuse or DC disconnect! Hooking up an alternate energy source or diversion load without a fuse or disconnect can result in serious injury or death!**

**Use extreme caution when installing or servicing this controller. High amperages can KILL you. – Always disconnect the energy source before servicing this unit.**

---

<sup>1</sup> This information is for a 12 volt system. It will be double for a 24 volt system, etc.

# About load diversion

The basic operating philosophy of a diversion controller is quite simple. Monitor the battery voltage, and if it should rise to a predetermined level, connect a diversion load or “Dummy Load”, of sufficient size, to the battery or energy source to prevent the battery voltage from increasing any further. This is a very simple, yet very effective way of preventing battery overcharging. All alternate energy systems should have some form of battery overcharge protection.

Several schools of thought on the subject.

1. The source of power (wind turbine, solar panels etc.) -- should remain connected to the batteries while the dump load controller is actively dumping the excess voltage.
2. The source should be diverted to the load directly and disconnected from the batteries.

We happen to believe that is far better to leave the wind turbine connected to the batteries at all times. Why? When you remove the battery level voltage from a wind turbine and send it's power directly to a load, then it sees for all practical purposes a short circuit (depending on the resistance of the load and lead wires.) This may cause the turbine blades to slow dramatically and in some cases bring it to a halt. This braking action can cause heat build up in the stator if it is repeated every few seconds or so (if the battery is just a little over the top). **When you allow the turbine to see the batteries, along with the load, the turbine remains more within its design realm** -- always a good thing.

The wiring diagrams in this document demonstrate how to dump the batteries along with the source. Should you desire to disconnect the source from the batteries and send it to the load directly, simply utilize the N/C contacts of the relays as well. We'll be happy to send you a diagram -- this is a very simple change.

Please note: this controller does not include a blocking diode nor an A/C to D/C rectifier, as these are specific to your application. If you are using the controller with a DC turbine or solar panels, you may need to purchase a blocking diode. A/C turbines require rectification from A/C to D/C.

# Diversion Load Types

A diversion load needs to be larger (by at least 20%), than the sum total of all your solar/wind/hydro charge sources combined. When the diversion load is too small, battery voltage may continue to rise, even when the dump is active. It is also important to use a load that is not likely to fail. Light bulbs and similar such loads are not good diversion (dummy) loads, since they will fail and you may be left with no method to dump the excess energy from your batteries. A common dummy load is a standard 120vac, 2000 watt heating element readily available from your local hardware store. Please note, a 2000 watt element will not dissipate 2000 watts at lower voltages, therefore you may need to install multiple elements in parallel to achieve the desired load specifications.

Please use the following chart as a quick guide in using 120 VAC heating elements.

60Vdc dump (48Vdc system) -- 500 Watts -- 8.3 amps
30Vdc dump (24Vdc system) -- 125 Watts -- 4.2 amps
15Vdc dump (12Vdc system) -- 35 Watts -- 2.1 amps
120Vac -- 2000 Watts, at 16.7 amps

Another acceptable diversion load are power resistors. These can be obtained at most electronics resellers and are often available via online auction sites.

Use the following chart values of power resistors to obtain a 500-watt diversion load.

60Vdc dump (48Vdc system) -- (1) 500 watt, 8 ohm resistor (450 watts)
30Vdc dump (24Vdc system) -- (1) 500 watt, 2 ohm resistor (450 watts)
15Vdc dump (12Vdc system) -- (1) 500 watt, .5 (1/2) ohm resistor (450 watts)

The 500 wattage rated resistors in the chart above are an example only, it is perfectly acceptable to use higher wattage power resistors if they can be obtained economically.

Place multiple resistors in parallel for a higher wattage load. When you place same value resistors in parallel, you double the wattage rating, and  $\frac{1}{2}$  the resistance. This is a safe method of doubling the wattage/amperage handling capability of your diversion load.

**Note, you cannot simply use a lower value resistance without also increasing the wattage rating of your resistor.** For instance, attempting to use a single 500 watt power resistor of 2 ohms on a 48 volt battery system (60v dump), will result in the dissipation of 1800 watts, however the resistor is only rated at 500 watts, and will be destroyed.

Please visit our online store for a selection of diversion loads, diodes and rectifiers.

<http://www.ColemanAir.us>



## Selecting your battery system voltage

The Coleman Air C440-HVM can handle 12, 24 or 48 volt system. To set the controller for use with a 12 volt system, place the jumper in the 1<sup>st</sup> position closest to the large terminal block; use the 2<sup>nd</sup> position for 24 volt systems; and the 3<sup>rd</sup> position for 48 volt systems.

**12v - Pos #1**  
(Closest to large terminal block)

**24v - Pos #2**

**48v - Pos #3**

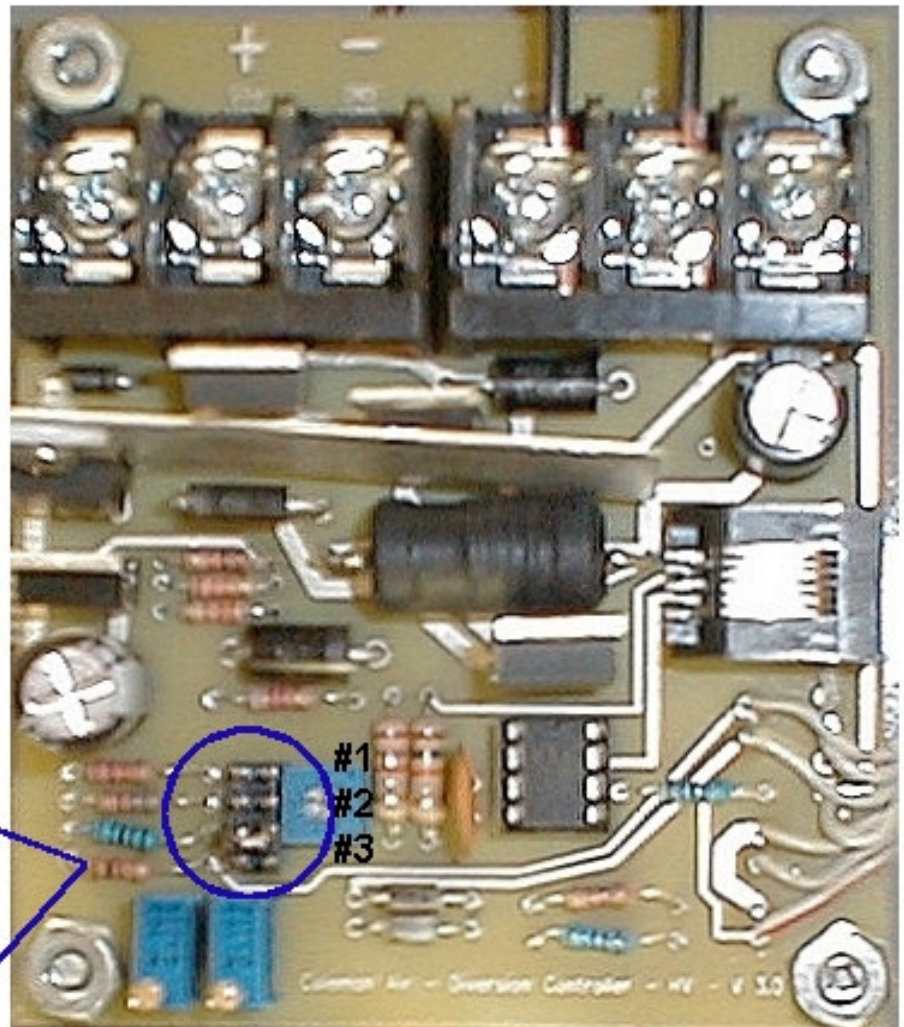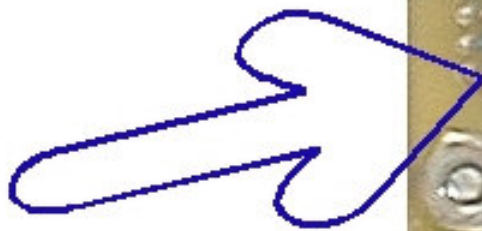

## 12, 24, 48 Volt Selection Jumper

Note: Position 4 is not currently used.




# Standard wiring for 12, 24 and 48 volt battery banks

## 12, 24 or 48 Volt Standard Diversion Control Wiring Diagram

Output of turbine shown to be DC for clarity of diversion control.

Your system may require a blocking diode or three phase rectifier.

Wind, Solar or Hydro Energy Source

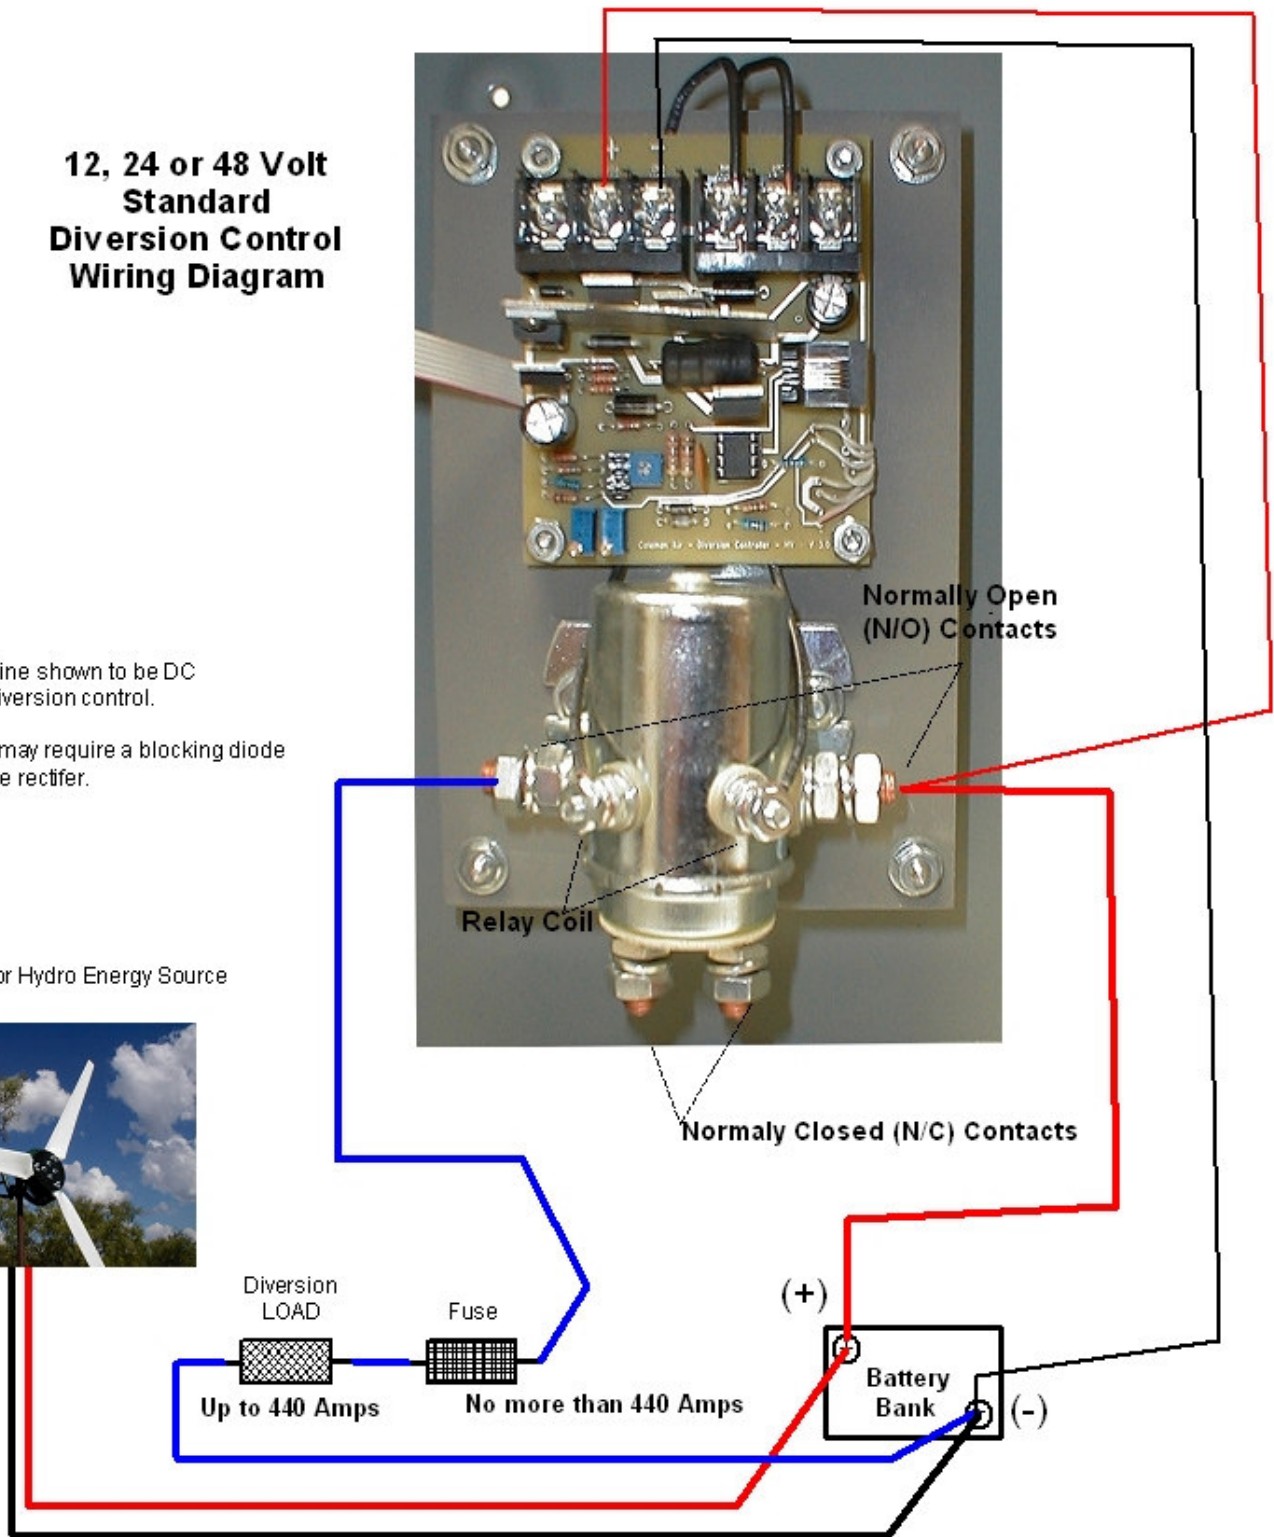

Relay Coil

Normally Open (N/O) Contacts

Normally Closed (N/C) Contacts

Diversion LOAD

Fuse

Up to 440 Amps

No more than 440 Amps

(+)

Battery Bank

(-)


# Using the controller as a disconnect controller

Disconnect controllers are used with solar systems and other energy sources where the source does not require a constant load (Solar). Using the Coleman Air 440 Amp controller in this fashion is just a matter of using the normally closed contacts of the relay instead of the normally open contacts. See the images below.

## 12, 24 or 48 Volt Disconnect Wiring Diagram


This controller does not contain blocking diodes. Blocking diodes should be installed to prevent battery discharge at night and on low sun days.

Solar Array - Open collector voltage should not exceed double your battery system nominal voltage.

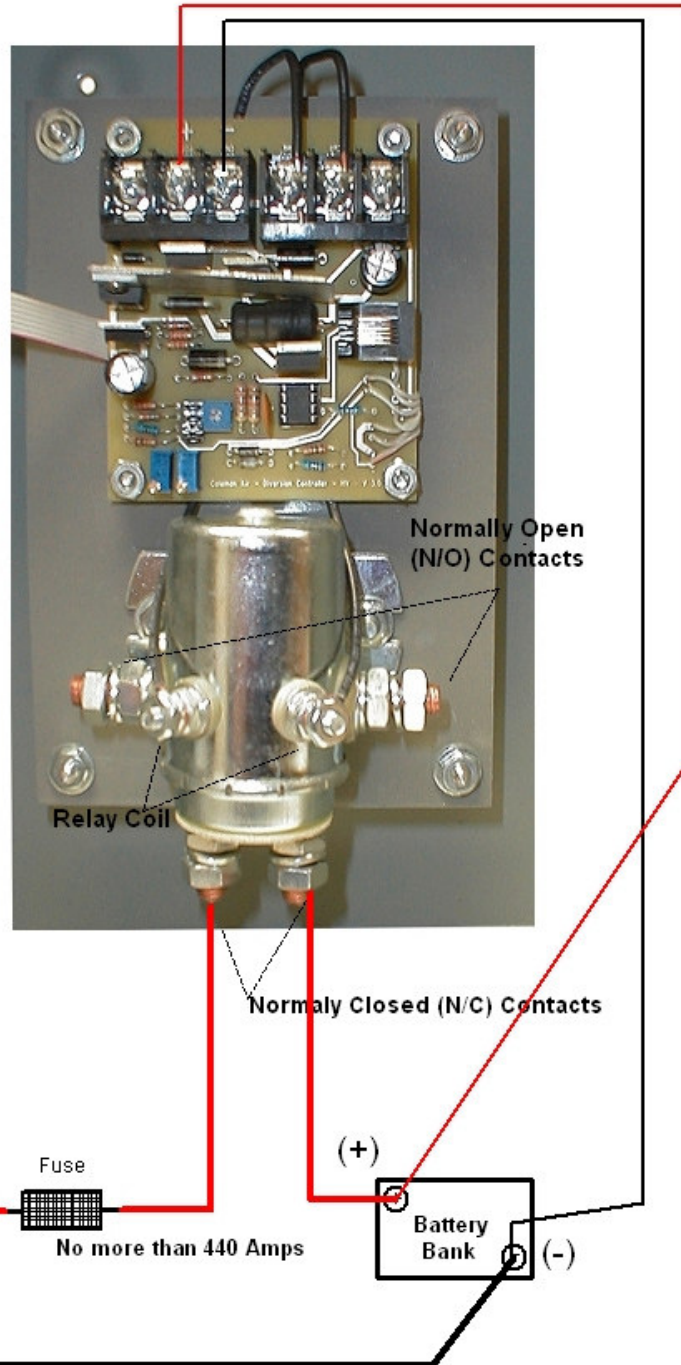

**Note: Both wind and Solar can be used together by combining the two wiring diagrams.**

# Calibrating the Diversion Controller

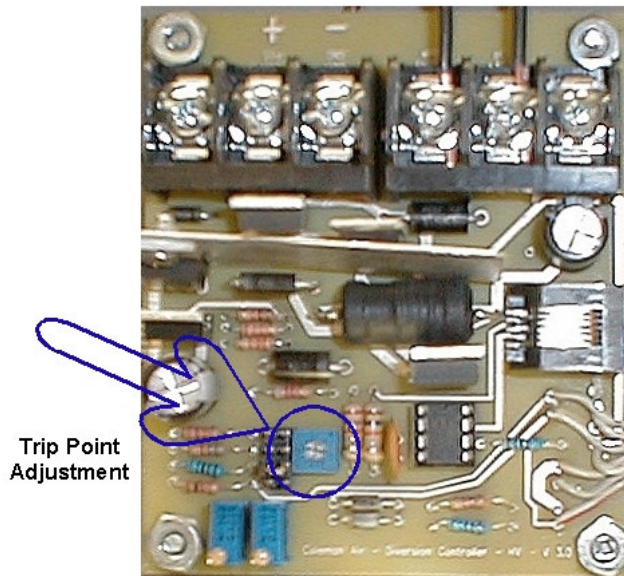

The controller has already been calibrated by the factory using the following settings, and does not require calibration, unless the trip point used is not satisfactory for your installation.

The Green LED will be illuminated as follows:

One flash indicates the battery is less than 12 volts (12 volt system - double for 24 etc)

Two flashes indicates the battery is 12 to 12.5V

Three flashes indicates the battery is 12.6 to 13v

Four flashes indicate the battery is 13.1 to 13.5V

Five flashes indicates the battery is above 13.5V but less than 13.9V

Steady green means the battery is 13.9 volts or higher.

The Red LED is illuminated when the battery has reached a voltage level of 14.5v or higher

If you would like to change the dump level trip point, please use the following procedure.

If you own a variable voltage power supply, then the following procedure is recommended.

- 1) Turn the dump level potentiometer fully counter clockwise.
- 2) Set the voltage of the power supply to the desired dump level trip point (for instance 14.2 volts)
- 3) Slowly turn the dump level potentiometer clockwise until the green LED is illuminated steady.
- 4) Pause for at least 5 seconds, then slowly continue to turn the dump level potentiometer clockwise until the red LED is illuminated.
- 5) Lower the voltage of the power supply by at least one volt.
- 6) Slowly turn the voltage of the power supply up until the red LED is illuminated, checking to see if you achieved your desired setting. Please note; the input level is only checked once every 5 seconds while the green LED is flashing, and only once every second while the green LED is steady, so you must make very slow adjustments during this procedure. If you feel you have passed your set point, then restart the procedure. Turning off the power supply to force all voltages to be dissipated, can be very helpful.

Please note: Changing your dump level set point will also change the voltage levels for which the green LED flashes.

If you do not own a variable voltage power supply, or would rather set the controller while it is installed, then if you have an inverter that is able to set the float or bulk charge voltage of the battery bank to a particular level, use the inverter as your variable voltage supply.

If you do not have an inverter that is capable of this, then you will need to cause your batteries to be brought to desired dump level trip point via your wind/solar/hydro energy source. Then once they have achieved this set point, turn the dump level set point potentiometer fully counter clockwise. Wait 15 seconds, or until the green LED is flashing no more than 3 times. Then slowly turn the same potentiometer clockwise until the green LED is illuminated steady. Wait 5 seconds, then, slowly turn the same potentiometer until the RED is illuminated.

All of the content contained in ColemanAir.us and mirroring websites as well as ColemanAir.us Instructional Material are subject to copyright, trademark, service mark, trade dress and other intellectual property rights or licenses held by Coleman Air Parts. Your use of the trademarks, service marks, trade dress and copyrighted material and intellectual property displayed on this website and Instructional Material is strictly prohibited. You may download, print and store selected portions of the Content, provided you (1) only use these copies of the Content for your own personal, non-commercial use, (2) do not copy or post the Content on any network computer or broadcast the Content in any media, and (3) do not modify or alter the Content in any way, or delete or change any copyright or trademark notice. No right, title or interest in any downloaded materials is transferred to you as a result of any such downloading. ColemanAir.us reserves complete title and full intellectual property rights in any Content you download from this Web site or derived from our Instructional Materials. Except as noted above, you may not copy, download, reproduce, modify, publish, distribute, transmit, transfer or create derivative works from the Content.